



3

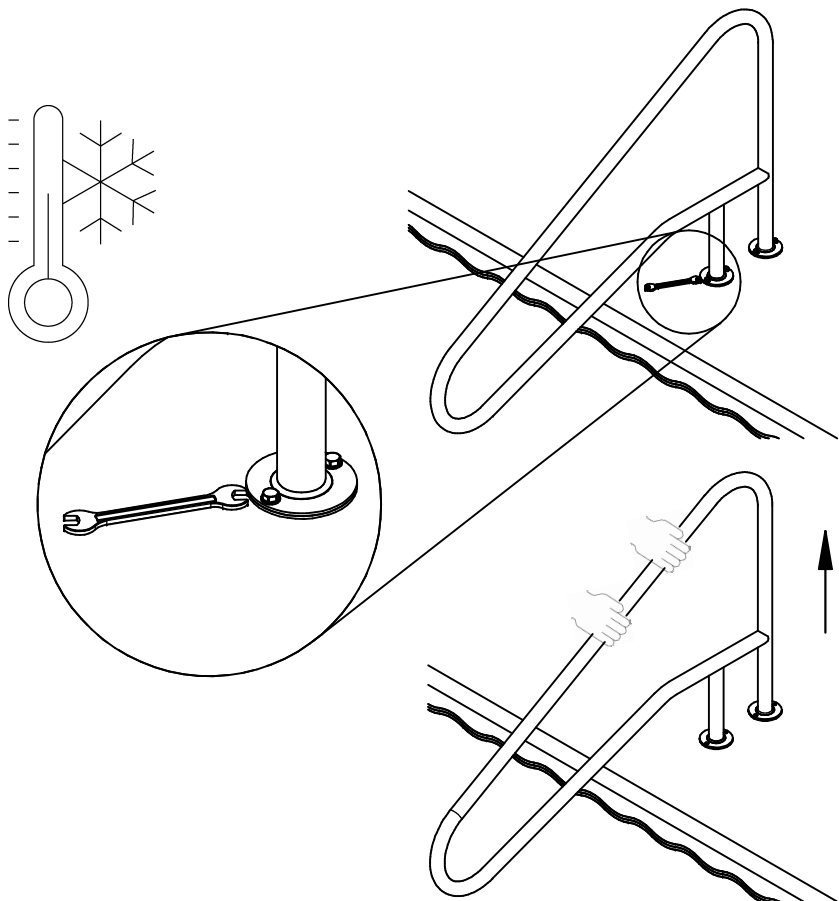

4

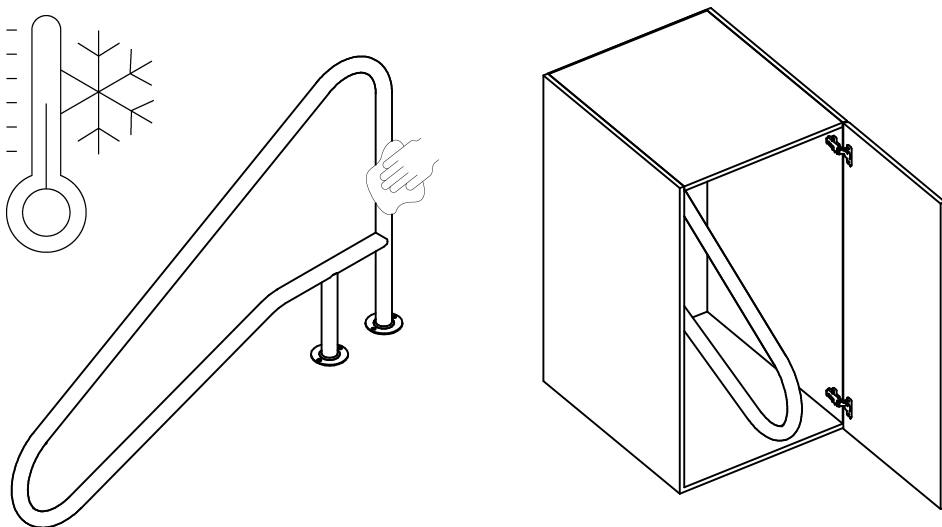

09940675








INSTRUCCIONES DE MONTAJE
BARANDILLA FX - 02 / PLETINA SOLDADA

ASSEMBLY INSTRUCTIONS
HANDRAILS FX - 02 / WELDED FLANGE


INSTRUCTIONS DE MONTAGE
SORTIES DE BAIN FX - 02 / PLETINE SOUDÉE

MONTAGEANLEITUNGEN
HALTEGRIFFE FX - 02 / GESCHWEIßTE FLANSCH



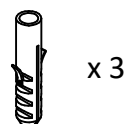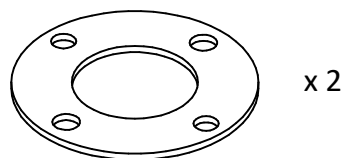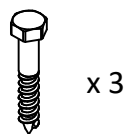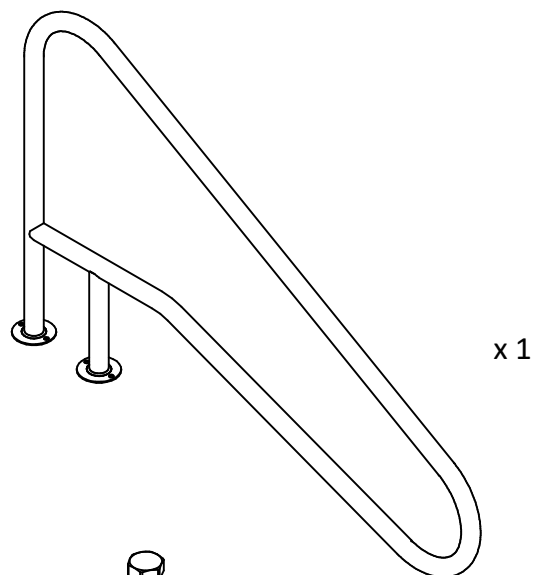

1

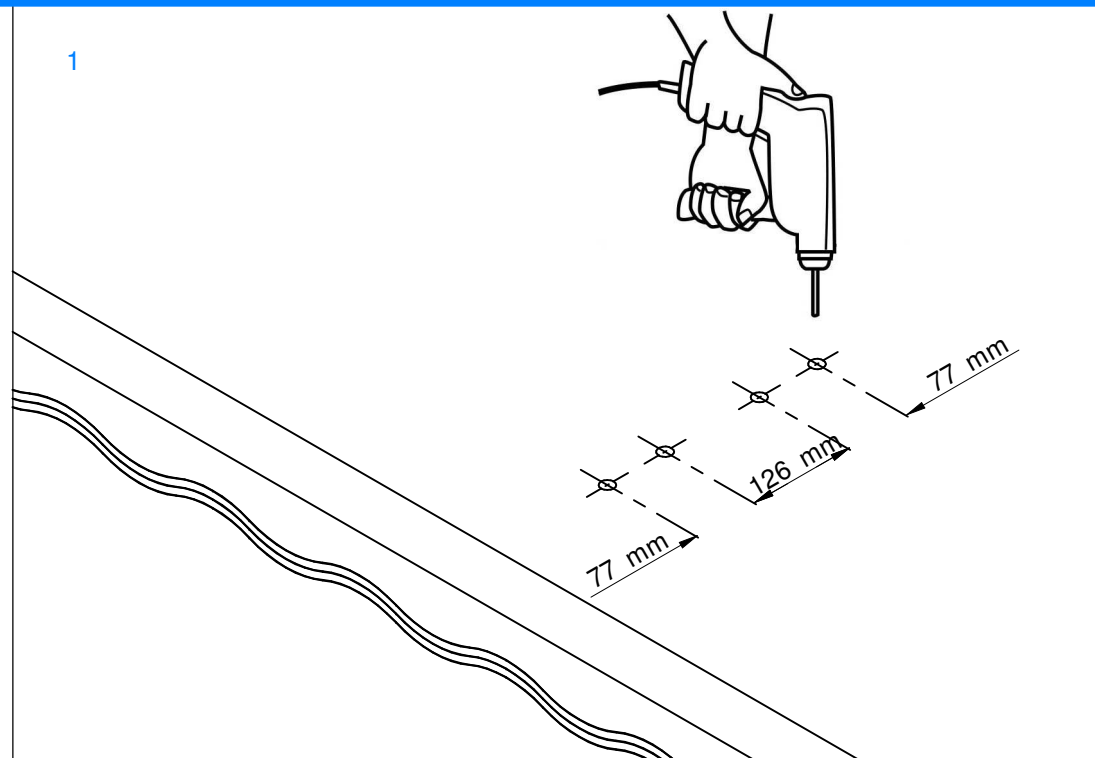

2

